



1070/EU1070


Ver:2.0 -08-01-2018

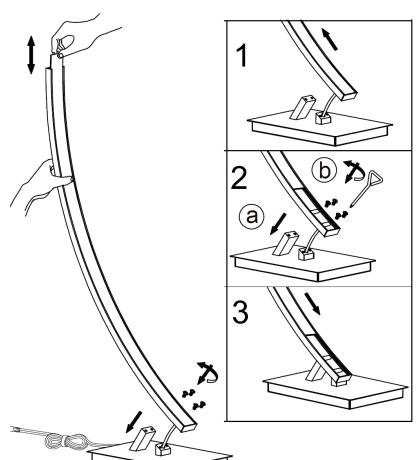







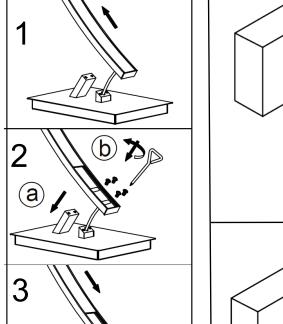


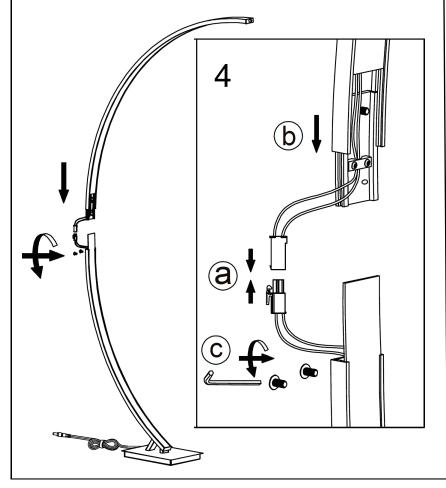

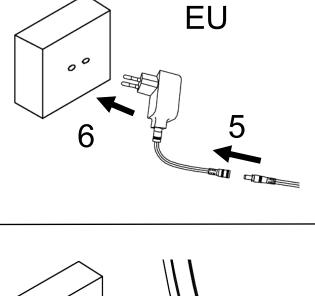

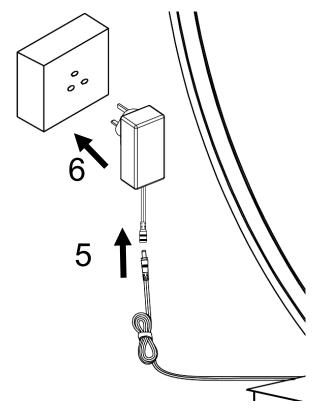

Button Dimmer

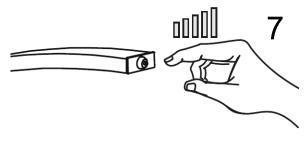

Safety Information: (Please retain for future reference)

- Before commencing assembly ensure the lamp is unplugged from the mains socket.
- Take care not to twist the cable during assembly.
- This is a Class 3 product and does not require an earth connection.
- Suitable for indoor locations only.
- Do not install the lamp in a damp atmosphere.
- Do not modify or alter any product before or after installation. This may render the product un-safe.
- Do not cover or drape any material over the lamp.
- Do not swing or hang from the Lamp.
- Ensure the power is switched off before cleaning or carrying out any maintenance..
- The Luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 0.2m is not expected.

LED INFORMATION:

- The Floor lamp has a 'Memory 'dimmer function .
- Push the button dimmer in to turn on the lamp. Push in again to turn off.
- To dim the light down push and hold the button dimmer in , release the button once the desired light level is achieved.
- To dim the light up push and hold the button dimmer in and release once the desired light level is achieved.
- Whatever light level has been set previously will be membered when the lamp is turned off and then
 on again, this is the 'memory' function of the dimmer.
- The LED lamps are Not replaceable, when the lamps reach the end of their life the whole luminaire shall be replaced.

Maintenance:

- Use a clean dry soft or slightly damp cloth.
- Do no use any abrasive cloths or cleaners as this may damage the product.

NOTE: IF THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS LUMINAIRE IS DAMAGED IT SHALL BE EXCLUSIVELY REPLACED BY THE MANUFACTURER OR HIS SERVICE AGENT OR SIMILAR QUALIFIED PERSON